Operation Method

1. Step

Description: to replace the traditional fluorescent lamps(18w to 20w).

Note: Before installing, first of all, remove the original Starter and Ballasts. Specific methods of operation as follows.1, fluorescent tube; 2, Lamp holders;3, Starter

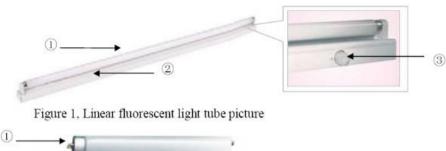




Figure 2, Step 1: remove the fluorescent tubes and Starter



Figure 3, Step 2: Open Lamp holders shell, changes connection mode (right)



Figure 4, Step 3: Installed Lamp holders, installing LED lamp(Finished)

CAUTION: recommend the users use in accordance with the above requirements. If the user doesn't remove the starter and ballast before use. The consequences maybe as follows: power consumption increased 1-2w. Decrease LED normal life. Ballast hot or damage. User shall take any responsibilities caused from no compliance with the instruction to using the LED Lamp.

- 2. Environmental requirements:

 - 2).Storage Temperature: -30°C ~+60°C
 - 3).Working Humidity:30%-85%
 - 4). Storage Humidity: 10%-90%
 - 5). Storage conditions: Indoor, ventilation.air should not be corrosive gases.

Buy T8 LED Tube: http://www.newstarleds.com/productshow488.html

NEWSTAR LED CO., LIMITED www.newstarleds.com